

VOTING MACHINE INSTRUCTIONS

- **INSERT THE VOTE CARD**

into the yellow slot on the bottom of the voting machine. Choose your language.

- **MAKE YOUR CHOICES**

- To make a selection, touch the square next to your choice. A checkmark will appear and all other squares will disappear.
- To change your vote, touch the same square again. Then, touch a square to make your selection.
- To go to the next screen, touch “Next” in the lower right of the screen.

- **REVIEW YOUR CHOICES ON SCREEN**

- Once you have viewed all contests and/or questions, touch “Review” in the lower right of the screen to review your choices.
- Touch “Scroll Down” or “Scroll Up” on the screen to move up or down.
- If your selections look good, touch “Print Ballot for Review” to go to the next step or “Back to Ballot” to make changes.

- **REVIEW YOUR CHOICES ON PAPER**

Touch “Print Ballot for Review” again (or “Make Changes” to return to previous menu). A paper record of your ballot will print to the right of the voting machine for your review.


- **CAST YOUR BALLOT**

- If your selections look correct, touch “Cast Ballot to Record Vote”. You will be finished voting and NO changes can be made after casting your ballot.
- If you want to make changes, touch “Make Changes”.

- **REMOVE THE VOTE CARD** when you see “Thank you for voting...”

Do NOT remove the card before this.

- **RETURN THE VOTE CARD** and receive an “I Voted” sticker.

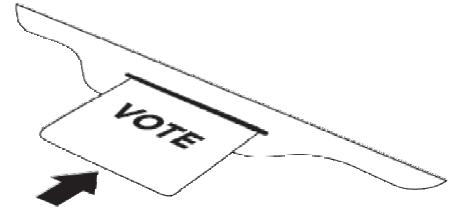

Candidate Name	☒
Party	
Candidate Name	
Party	
Candidate Name	
Party	

Next

Review

▲ Scroll Up ▲

▼ Scroll Down ▼

Print Ballot for Review

Make Changes



Review selections

Review your selections on the thermal printer.

Cast Ballot to Record Vote

Make Changes